

Multi-Channel Anemometer PRO Main Unit Firmware Version Upgrade Instructions

Kanomax Japan, Inc.

1. Unzip the downloaded update file and copy (save) it to the USB flash drive.


At this time, copy (save) the file to the root folder of the USB flash drive.

2. Insert the USB flash drive into the main unit and turn on the power of the main unit of Multipoint AnemoMaster PRO.

If the USB flash drive is successfully recognized, the update screen will appear, tap the “Yes” button.



4. Wait for a while for the update to start.

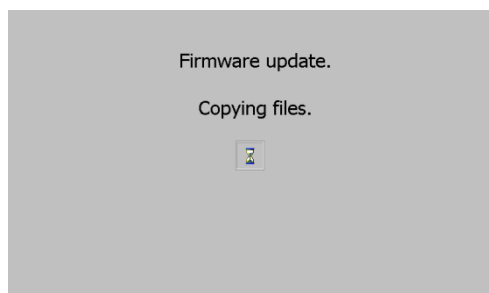

(Note) If the file copying stops during the update, If the USB flash drive is not recognized correctly, turn off the power and then turn it on again.


Please turn off the power once and start again from step 2.

5. When the update is complete, the Restart screen will appear.

Wait for the countdown to finish or tap “Restart Now!”



6. The device will reboot and the firmware will start.

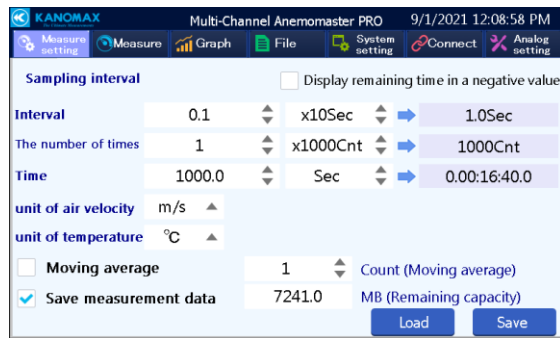

7. After the firmware update is complete, unplug the USB flash drive from the device.
There is no need to turn off the power. Please continue to use the device as it is.