

## How to upgrade of AccuFit 9000 series main unit firmware

KANOMAX JAPAN Inc.

1. Unzip the downloaded update file and copy (save) it to a USB memory.

Copy (save) it to the root folder of the USB memory.


2. Insert the USB memory from step 1 into the main unit and power on the AccuFIT9000 series main unit.

3. Once the USB memory is successfully recognized, the update screen will appear, so tap the "Yes" button.




4. The update will begin, so please wait a while.

**Note) If file copying stops during the update, the USB memory may not be recognized correctly. Turn off the power and start again from step 2.**

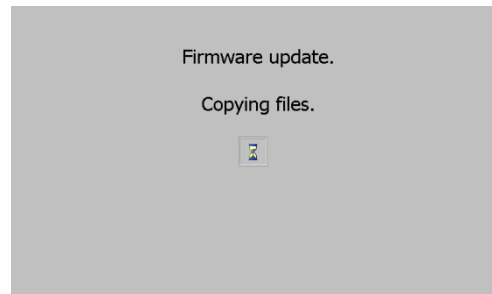

5. Once the update is complete, the Restart screen will appear.

Wait for the countdown to end or tap "Restart Now!"

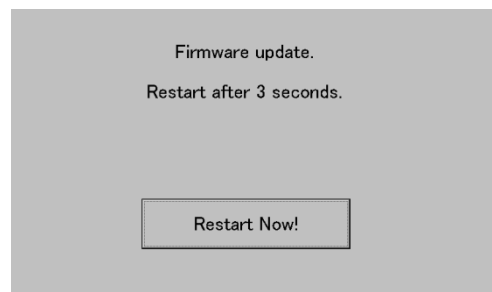

6. The unit will reboot and the firmware will start up.

7. The firmware update is now complete. Remove the USB memory from the unit. There is no need to turn off the power to the unit. Continue using it as is.

